

OPERATING & SAFETY GUIDE

This appliance is only for professional use by a qualified operator



Single Gas Burner
Product Code 503133

A Full EHA Code of Practice for the "Safe Use of LPG" is available on our website www.allenshire.co.uk. Please go to our Gas Appliances and BBQs catalogue page to download

Never use the equipment in a poorly ventilated space. Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

Keep a bucket of water nearby to treat burns. Use a CO₂ extinguisher in case of fire. Wear suitable clothing, such as an apron, overall and hat. Use kitchen/BBQ gloves to handle utensils. Tie back long hair.

Allow the appliance to cool fully before touching or cleaning.

GENERAL SAFETY ADVICE

Allens will have prepared, checked and delivered this appliance to you in accordance with the Code of Practice entitled "Safe Use of LPG: Portable and Transportable Equipment in the Hire Industry" (LPG Code) launched in October 2013 by the Event Hire Association (EHA).

PLEASE READ THESE INSTRUCTIONS CAREFULLY. THERE IS A RISK OF INJURY IF YOU DO NOT FOLLOW THE INSTRUCTIONS IN THIS GUIDE.

These instructions are provided so you can familiarise yourself with proper and safe operation of this appliance but are not a substitute for being conversant with duties as hirer under the LPG Code.

The safe use of hired gas equipment is the sole responsibility of the hirer once the items are collected or arrive on site. Allens staff are not allowed to install equipment on site and you are not permitted to make any alterations to the appliance or its connectors in any way.

If in any doubt please ask an Allens advisor for advice on 020 8574 9600 or a gas safe engineer conversant with the LPG Code.

Fitting The Gas Cartridge

- Make sure the gas tap is closed by turning the adjustment knob fully clockwise.
- Grasp the burner assembly and gently screw in the cartridge clockwise until you hear a click (approximately one sixth of a turn). Do not tighten the cartridge beyond this point as this could damage the valve.
- The appliance is ready for use.

Using The Burner

- To light the burner, hold a flame near to the burner and gradually open the gas by turning the knob anti-clockwise.
- To cook place the Flambé pan in the middle of the burner and adjust the gas so that the flame does not exceed the size of the pan.
- To turn off the burner after cooking, close the gas by turning the knob fully clockwise.

Removing The Gas Cartridge

The gas cartridge can be removed even if it is not empty. Replace the gas cartridge outdoors and away from other people.

- Wait for the burner to cool down.
- Make sure the gas tap is closed by turning the adjustment knob fully clockwise.
- Grasp the burner assembly (beware: it may be hot!), gently unscrew the cartridge anti-clockwise (approximately one sixth of a turn) and remove it.